

# Washing Machine



CONTROL PANEL



SELECTOR



DETERGENT  
COMPARTMENT



OPTIONS & START  
BUTTONS

## A. Washing Options

- Prewash - Badly soiled clothing that requires heavy washing and takes approx. 1½ hr to complete the cycle
- Economic - Normally soiled clothing and takes approx. 1 hr 15 min to complete the cycle
- Quick wash - Short cycle for mildly soiled items and takes about 35 to 40 mins to complete the cycle

**Note:** If cold water is used, the cycle will be shortened by 5 mins.

## B. How to use the washing machine

1. Load the laundry.
2. Pour detergent into the dispenser compartment and close the dispenser gently. 2nd compartment for economic and quick wash / 1st and 2nd compartments for prewash / 3rd compartment for fabric softener.
3. Use the selector to select the washing option. Cotton or synthetics at 30 degrees temperature.
4. Select the spin speed from 500 to 850 rpm, (no spin), and (rinse hold).
5. Select the washing option ( Prewash, Economic and quick wash ) and the extra rinse if extra cleaning is required (Optional).
6. Select the delay option if you choose to commence washing at a later time, otherwise ignore this option (Optional).
7. Select the start button.

## C. Cancelling a Programme

Turn the selector to "0" to cancel a Programme which is running. When the machine stops, repeat steps 2 to 7.

## D. Usage Advisory

- Low-subs detergent is recommended because it reduces the foaming that cannot be discharged completely after the last rinse and will corrode the machine base when they dry out.
- No spin in step 4 - the machine will not spin the clothes after draining the water at the last rinse.
- Rinse hold in step 4 - the water at the last rinse is not emptied out to prevent the fabric from creasing.
- When the Programme has finished, turn the selector to "0", select Drain and Spin Programme, and press start to complete the cycle.

**Note: If you encounter any problems or require more information, please inform our Concierge.**